Gas Well Deliquification Workshop

Sheraton Denver Hotel

Denver, Colorado

February 24 - 26, 2014

Introduction to Plunger Lift

David Cosby, P.E.

Shale Tec LLC

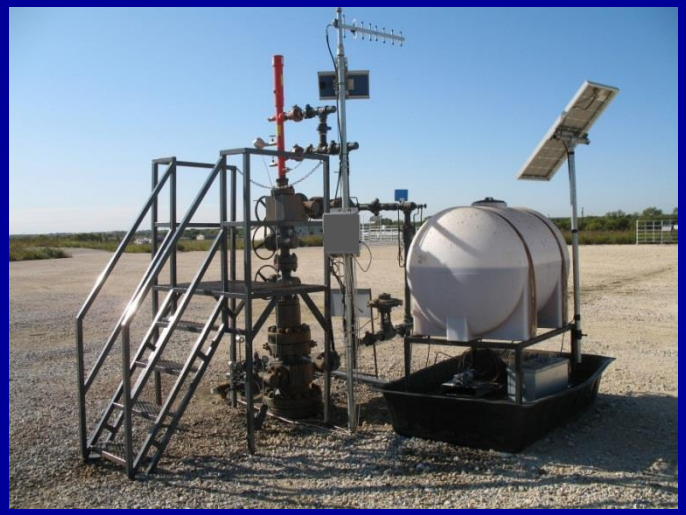

Introduction to Plunger Lift

How does plunger lift work

Why is artificial lift required

When is plunger lift required

Applications and benefits

Installation and operation

Safety

Primary Purpose

Removal of liquid from gas wells so that gas can flow freely to the surface

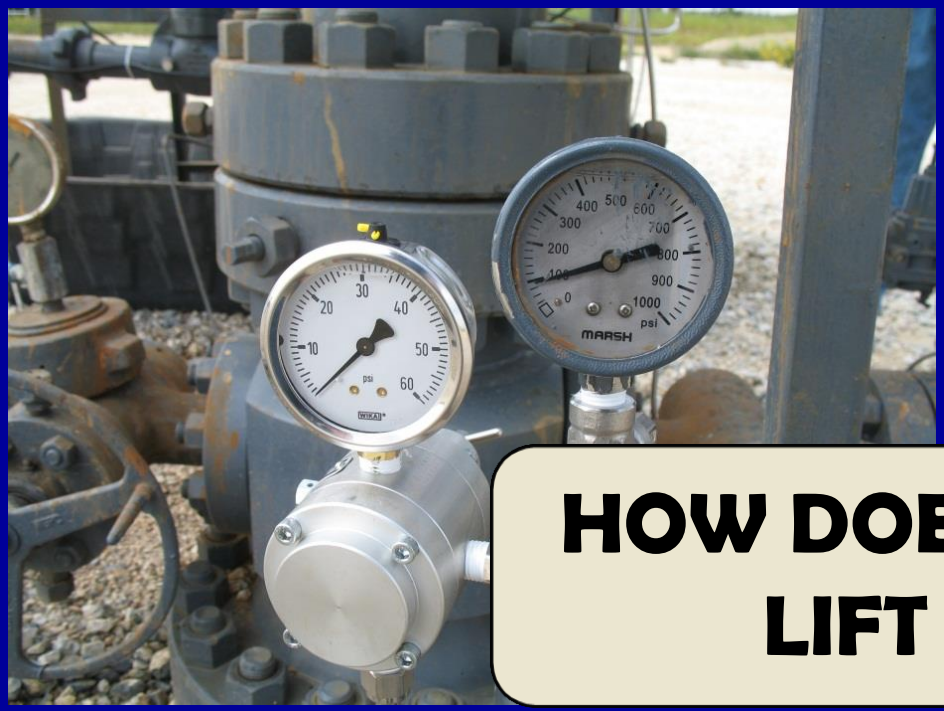

HOW DOES PLUNGER LIFT WORK

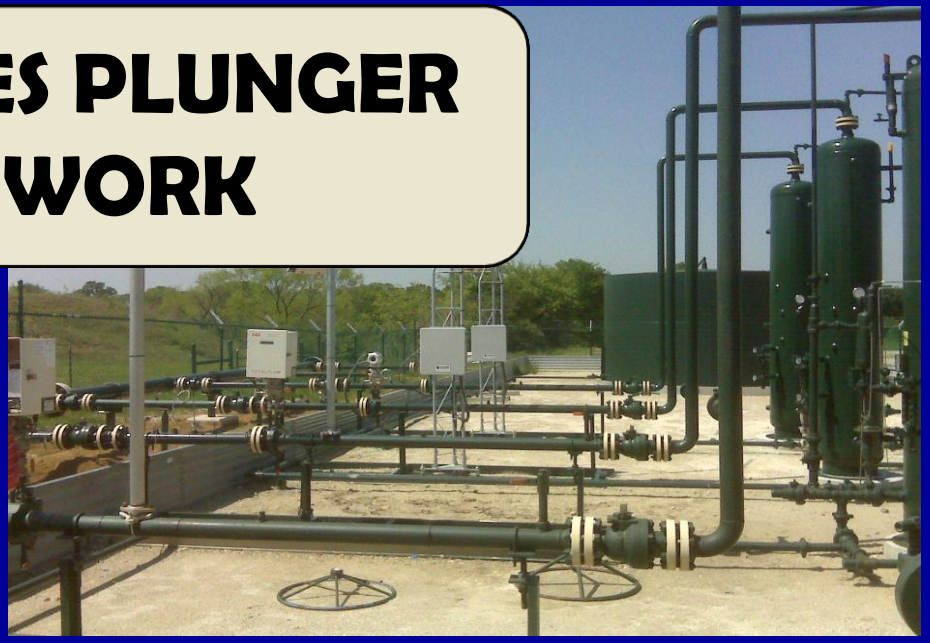

How Does Plunger Lift Work

- Bottom Hole Spring
- Plunger
- Arrival Sensor
- Lubricator / Catcher
- Pressure Transducers
- Control Valve(s)
- Gas Flow Meter
- Well Head Controller

How Does Plunger Lift Work

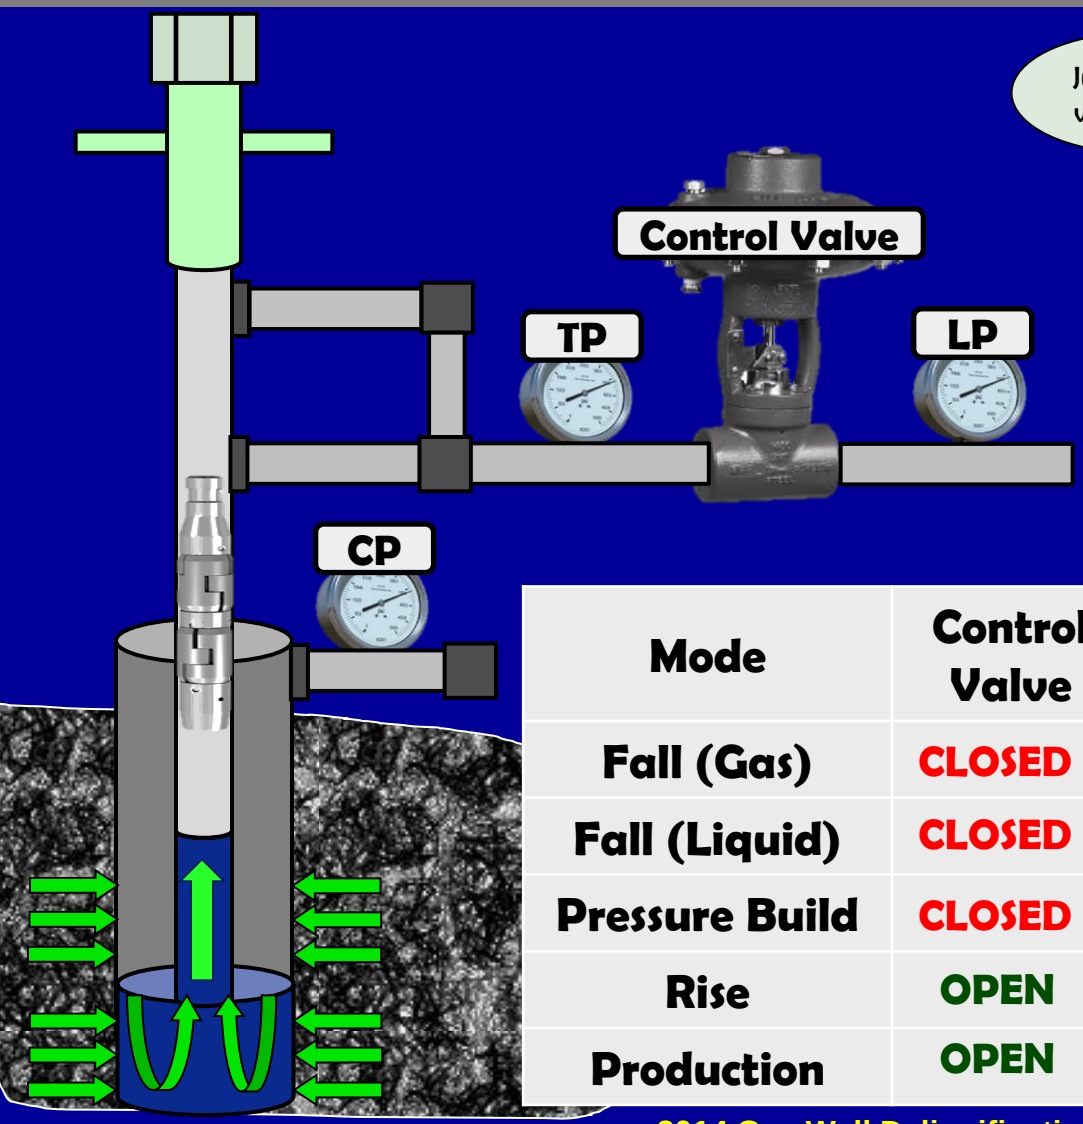

Just before well opens

LIQUID LOAD = (CP – TP)

LIFT PRESSURE = (CP- LP)

PLUNGER FALL VELOCITY

SPE 80891 – Determining how different plunger manufacturer features affect plunger fall velocity

FOSS and GAUL Required Pressure

SPE 120636 – Modified Foss and Gaul model accurately predicts plunger rise velocity

Mode	Control Valve	Gas Flow	Plunger	Casing Pressure
Fall (Gas)	CLOSED	NONE	FALLING	INCREASE
Fall (Liquid)	CLOSED	NONE	FALLING	INCREASE
Pressure Build	CLOSED	NONE	BOTTOM	INCREASE
Rise	OPEN	FLOW	RISING	DECREASE
Production	OPEN	FLOW	SURFACE	DECREASE

How Does Plunger Lift Work

Video courtesy of PCSFerguson

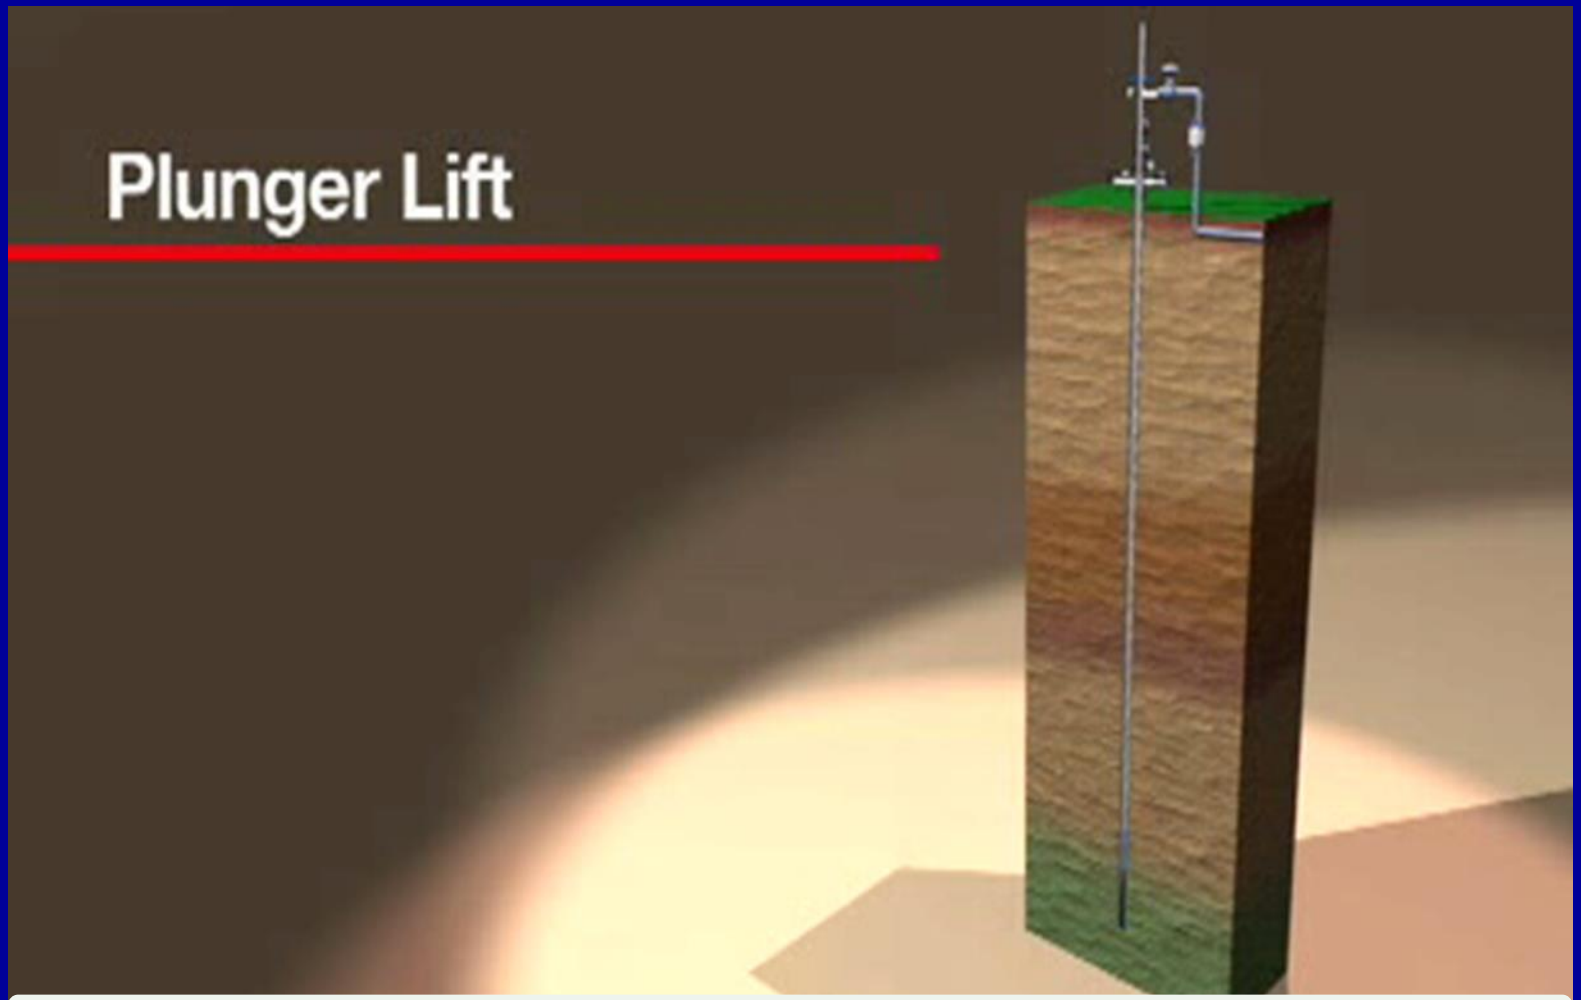

Production Control Services (PCS) and Ferguson Beauregard are now PCS Ferguson

How Does Plunger Lift Work

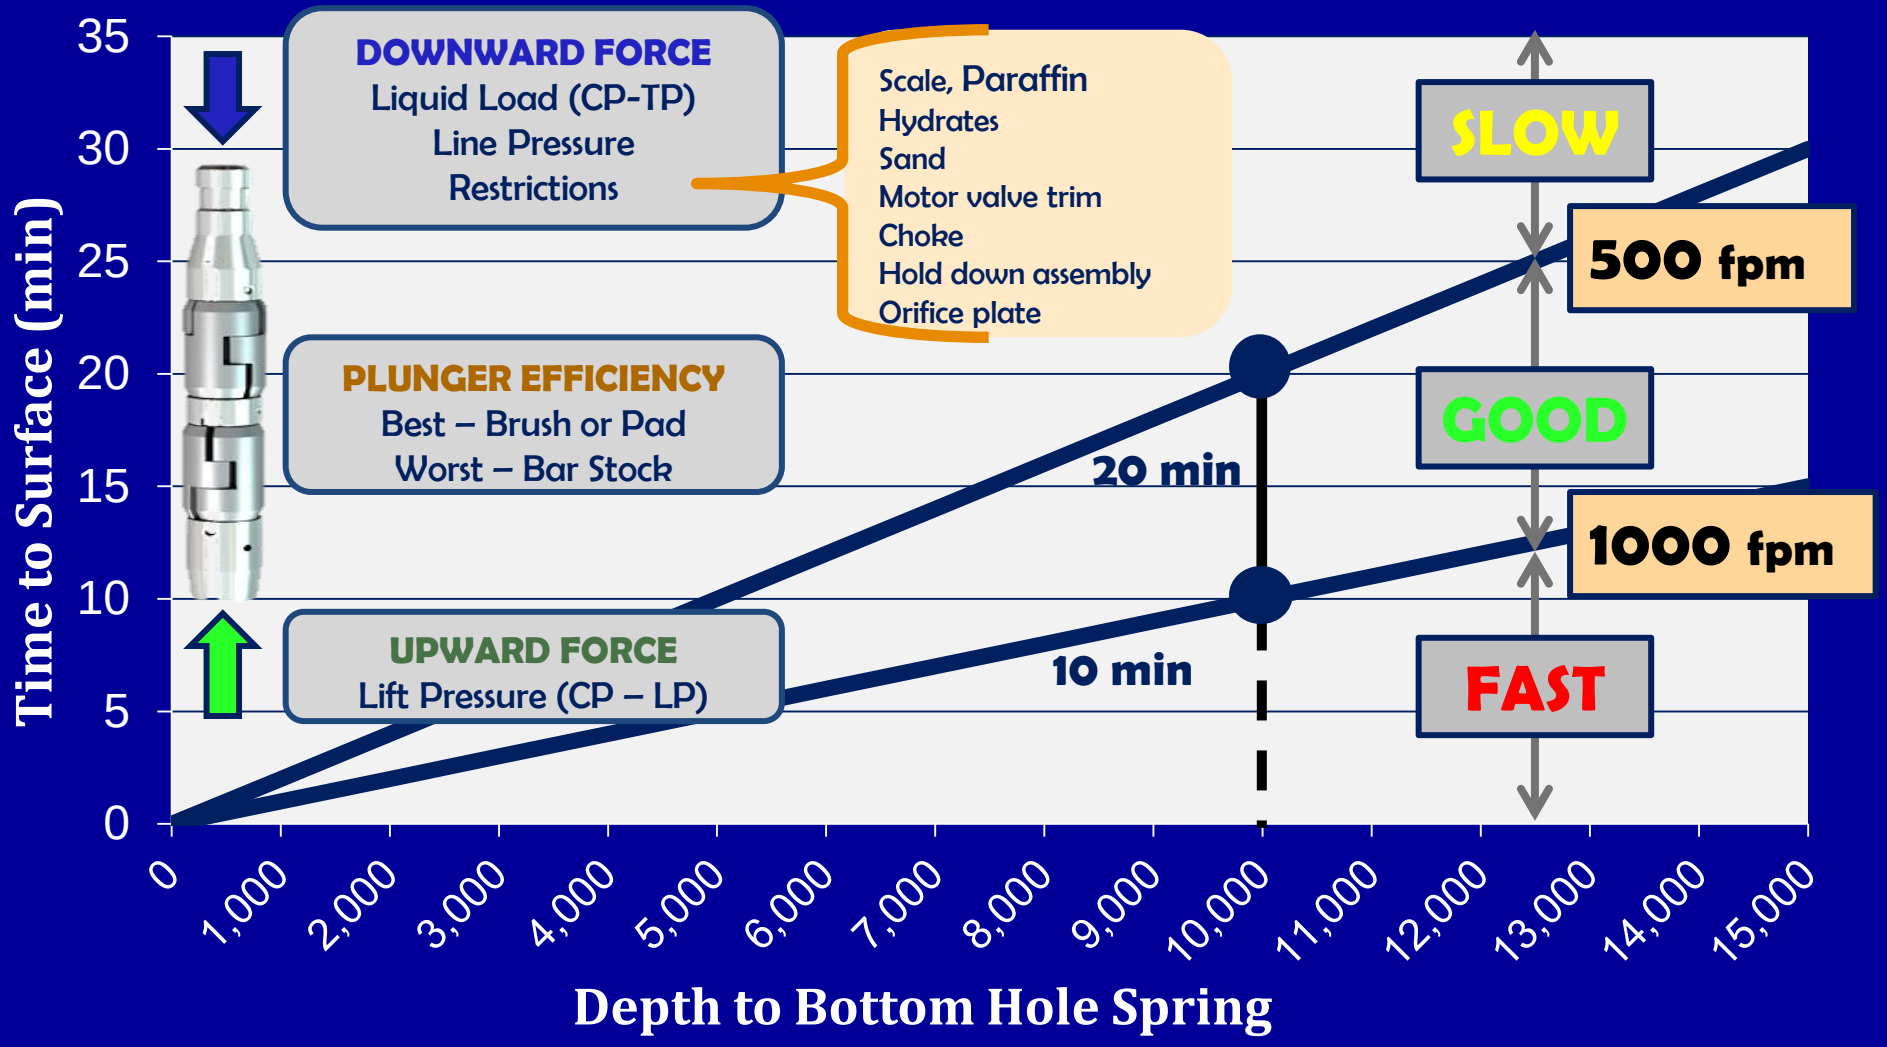

WHY IS ARTIFICIAL LIFT REQUIRED

Why Is Artificial Lift Required

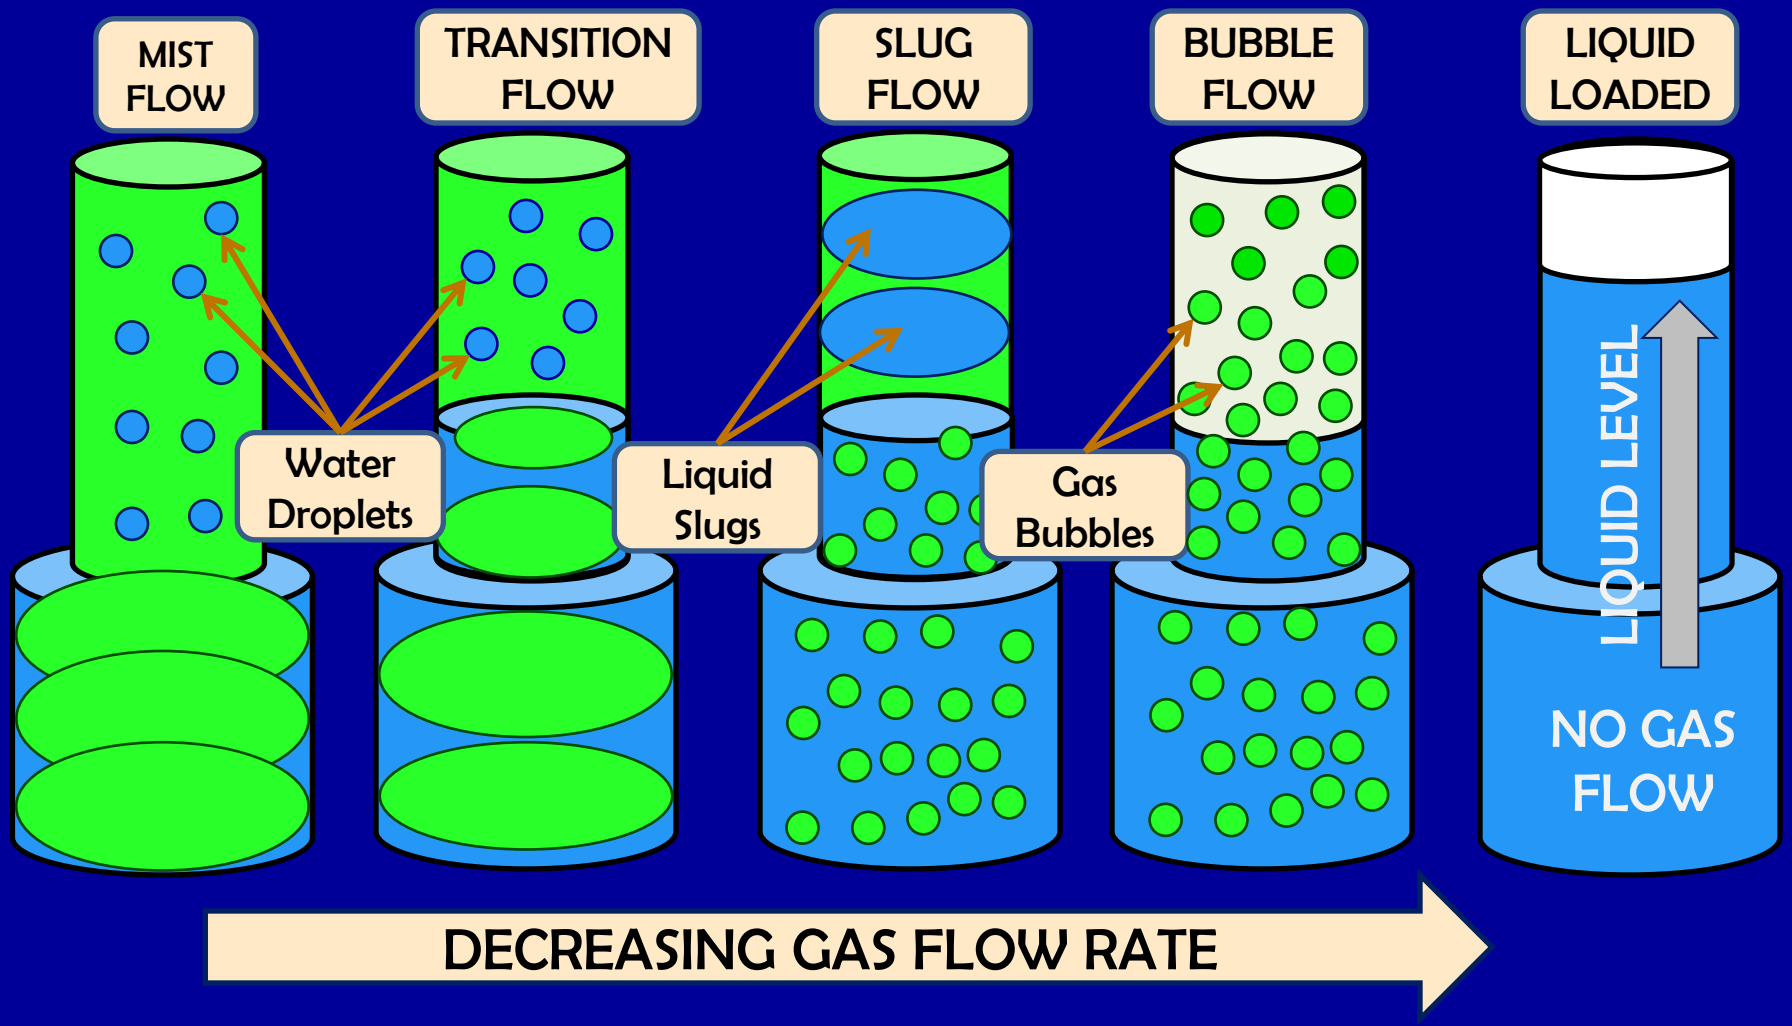

Why Is Artificial Lift Required

Video courtesy of PCSFerguson

Production Control Services (PCS) and Ferguson Beauregard are now PCS Ferguson

Why Is Artificial Lift Required

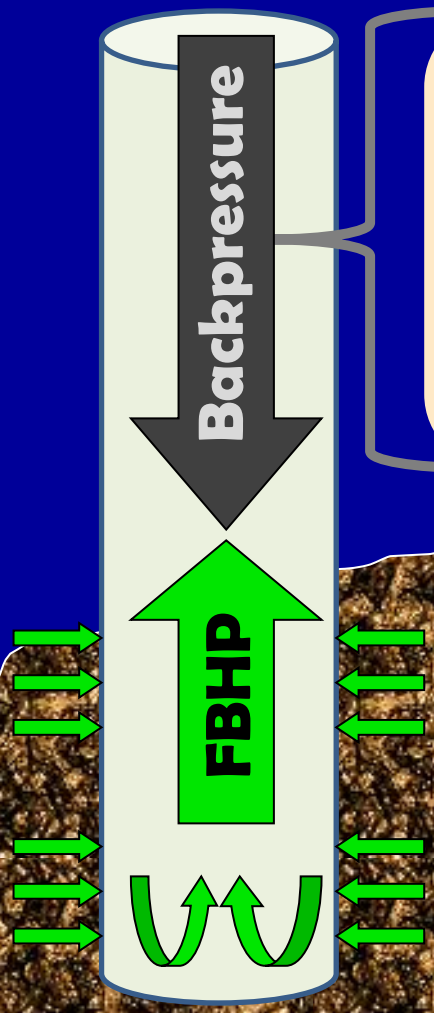

Line Pressure
Liquid
Scale / Paraffin
Chokes
Valve Trim Size
Orifice Plate
90 Degree Elbows

LOW Backpressure

Produces

LOW FBHP

Ensures

MOST Production

FLOWING BOTTOM HOLE PRESSURE

Why Is Artificial Lift Required

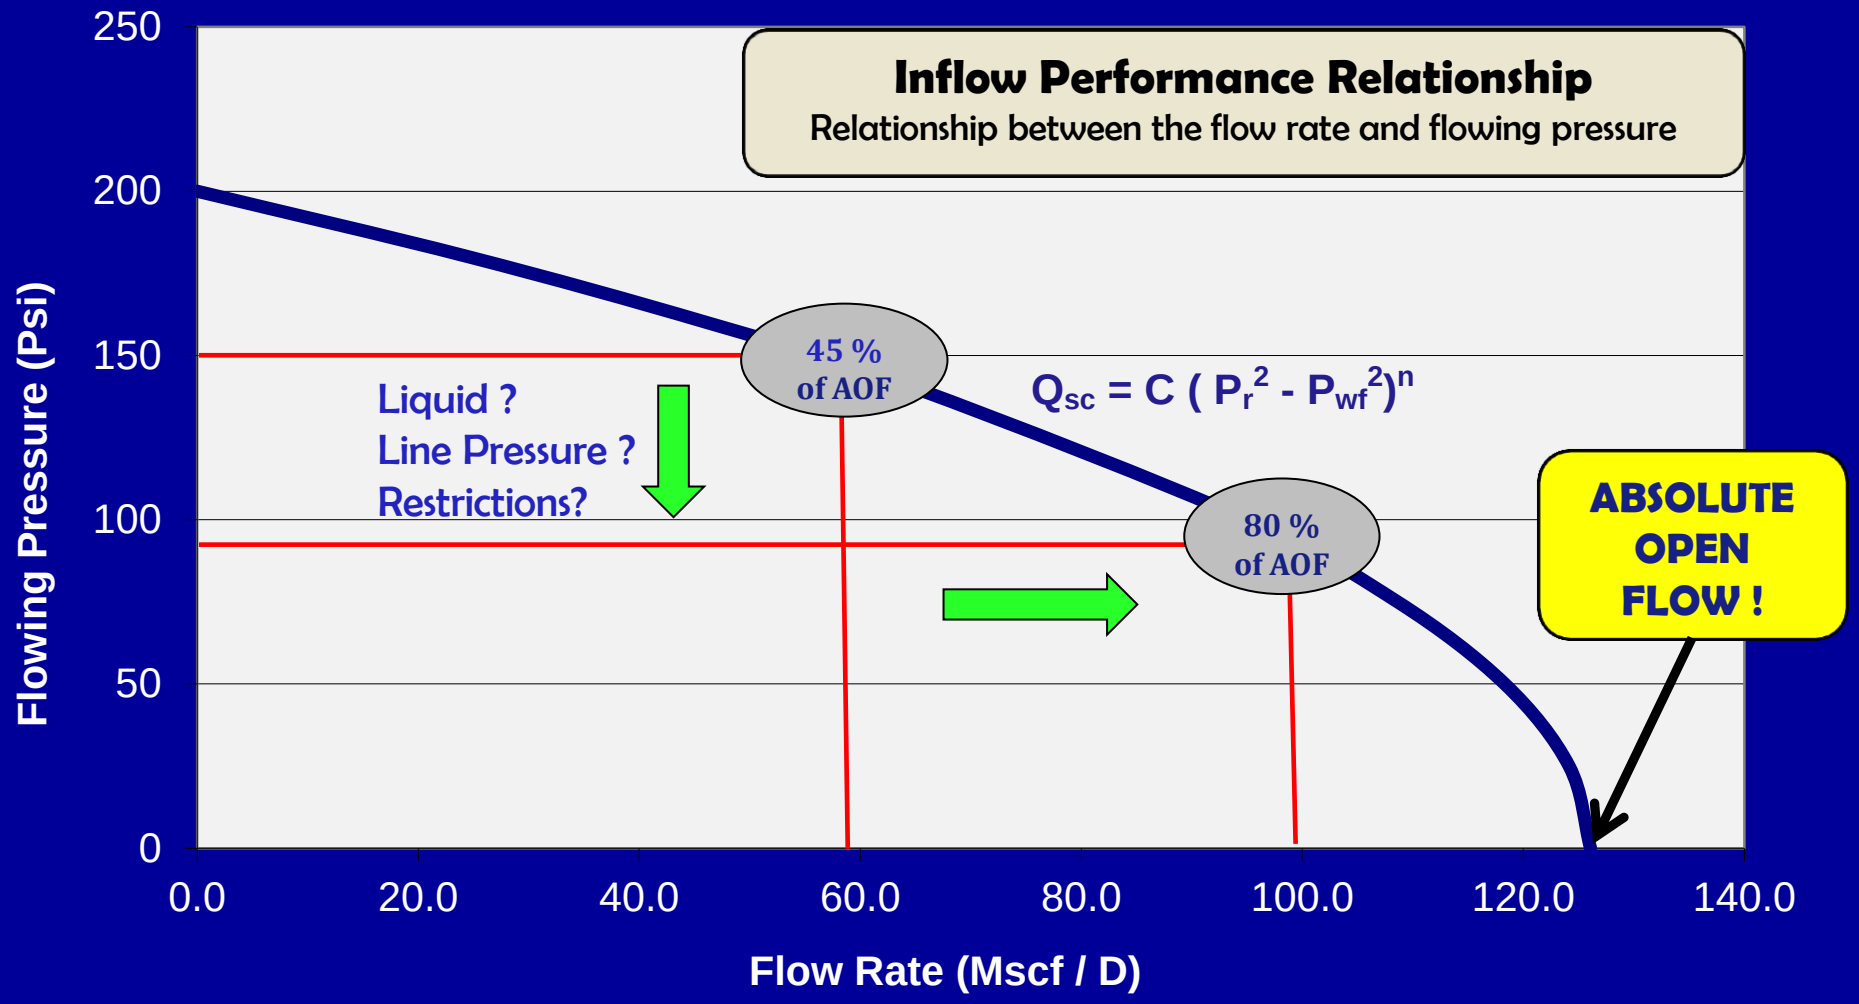

Why Is Artificial Lift Required

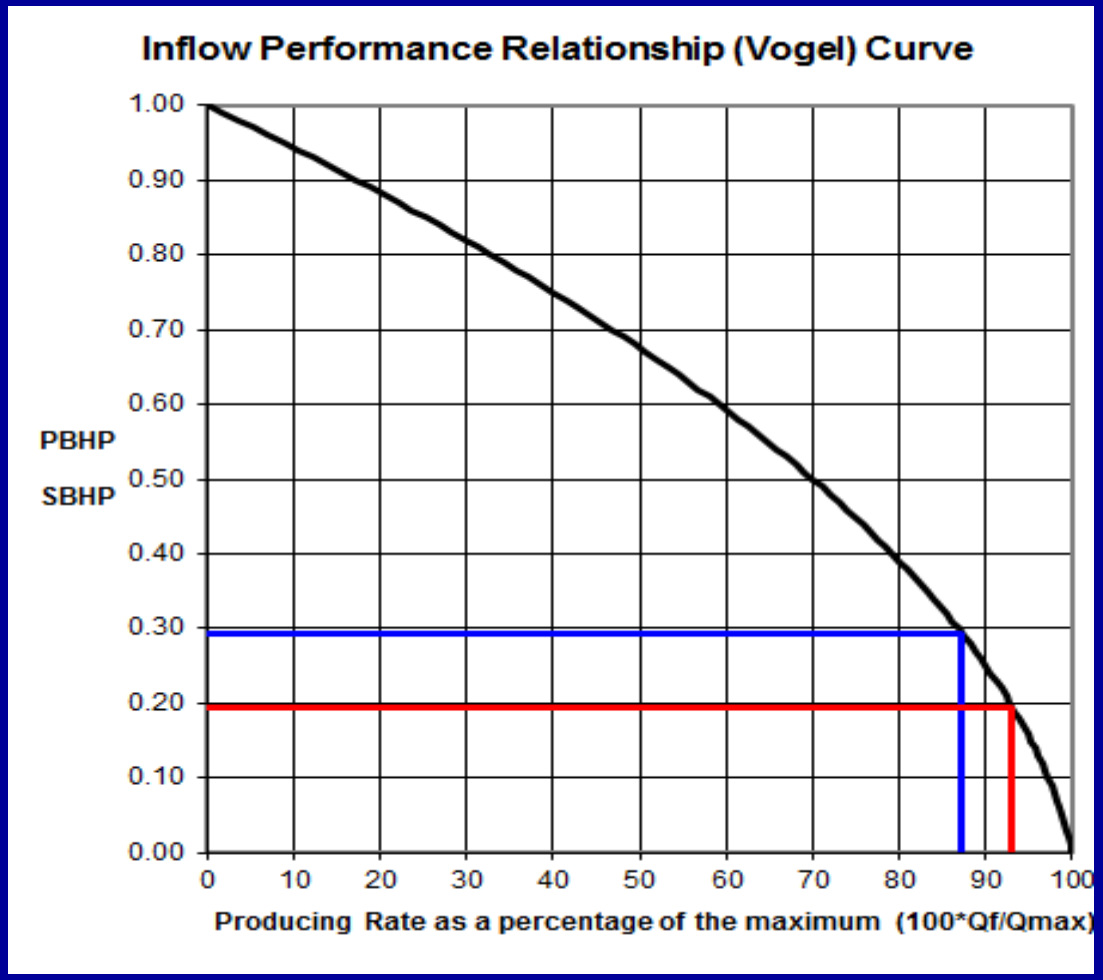

Producing BHP	=	265	Psi
Static BHP	=	900	Psi
Oil Rate	=	0	BPD
Water Rate	=	10	BPD
Gas Rate	=	380	Mscf/D
Qmax Gas	=	435.9	Mscf/D

Reduction in PBHP	=	90	Psi
Predicted Oil Rate	=	0.0	BPD
Predicted Gas Rate	=	10.7	BPD
Predicted Gas Rate	=	405.8	Mscf/D
Production Increase	=	6.8	%

Courtesy of EchoMeter

Why Is Artificial Lift Required

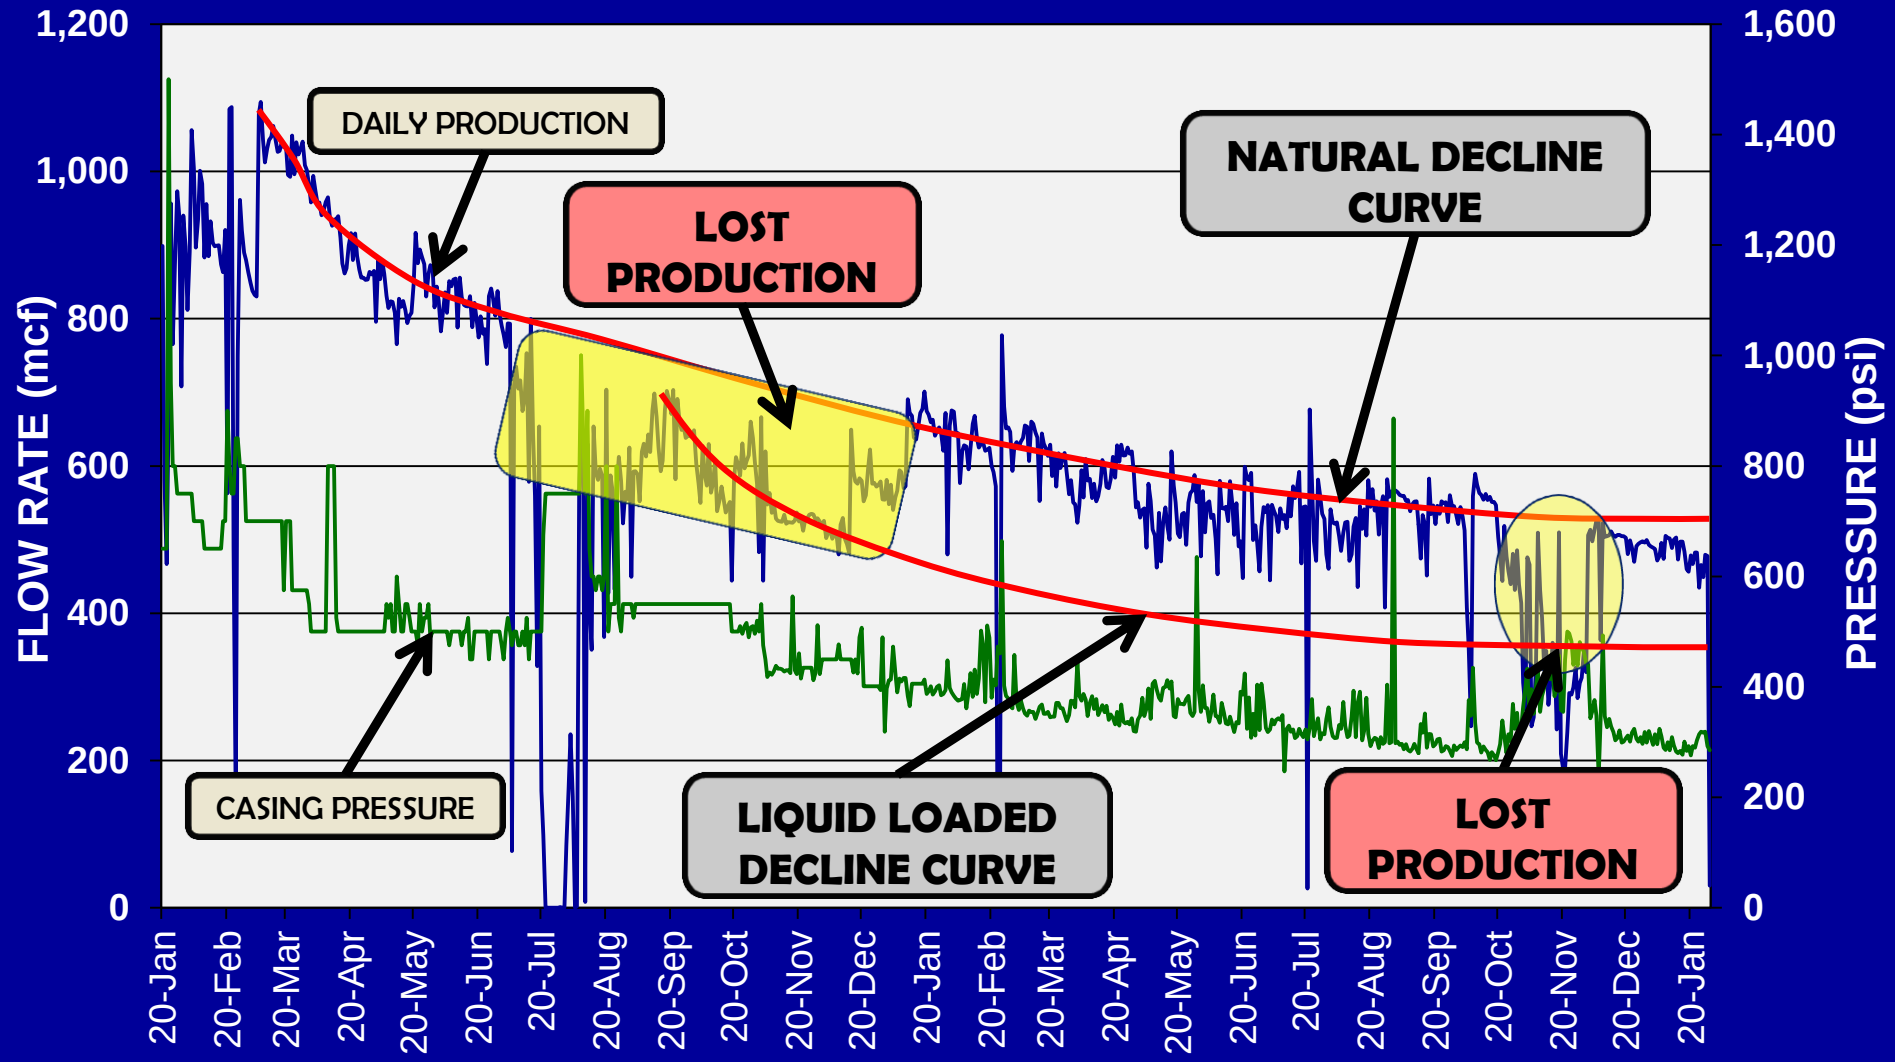

PLUNGER LIFT WELL REQUIREMENTS

Plunger Lift Well Requirements

IS LIQUID IN THE TUBING?
(Over 90% of US Gas Wells)

- ERRATIC PRODUCTION
- DECLINE CURVE ANALYSIS
- CRITICAL FLOW RATE

YES

IS GAS VOLUME SUFFICIENT ?

- 400 SCF / BBL / 1,000 FT OF LIFT
  - Foss and Gaul is a more precise predictor

YES

IS GAS PRESSURE SUFFICIENT ?

- LIFT PRESSURE >/= 2X LIQUID LOAD
  - Lift Pressure = (CP- LP); Liquid Load = (CP – TP)

Plunger Lift Well Requirements

IS LIQUID IN THE TUBING?

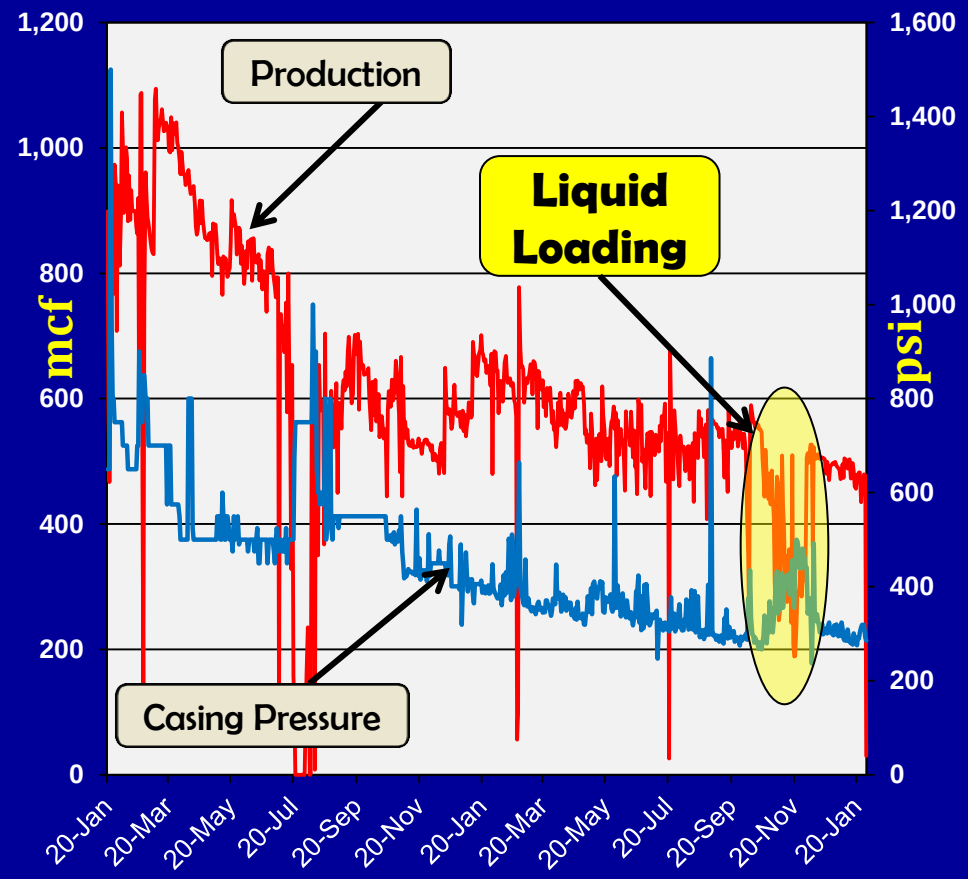

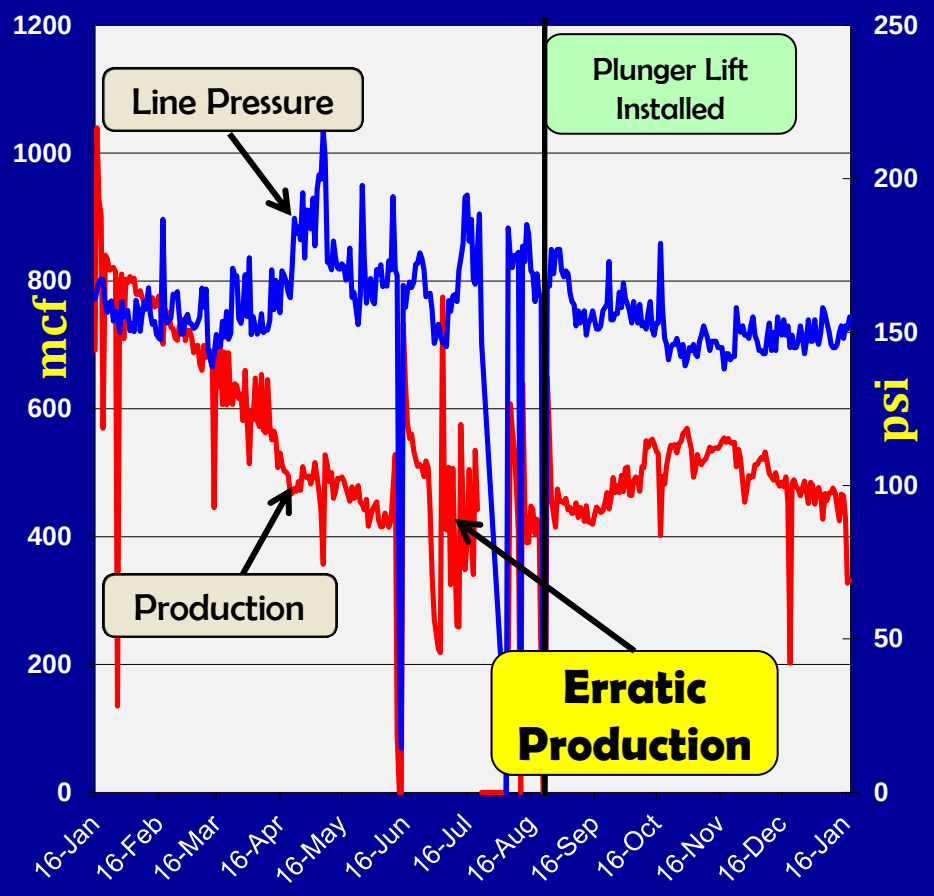

Plunger Lift Well Requirements

IS LIQUID IN THE TUBING?

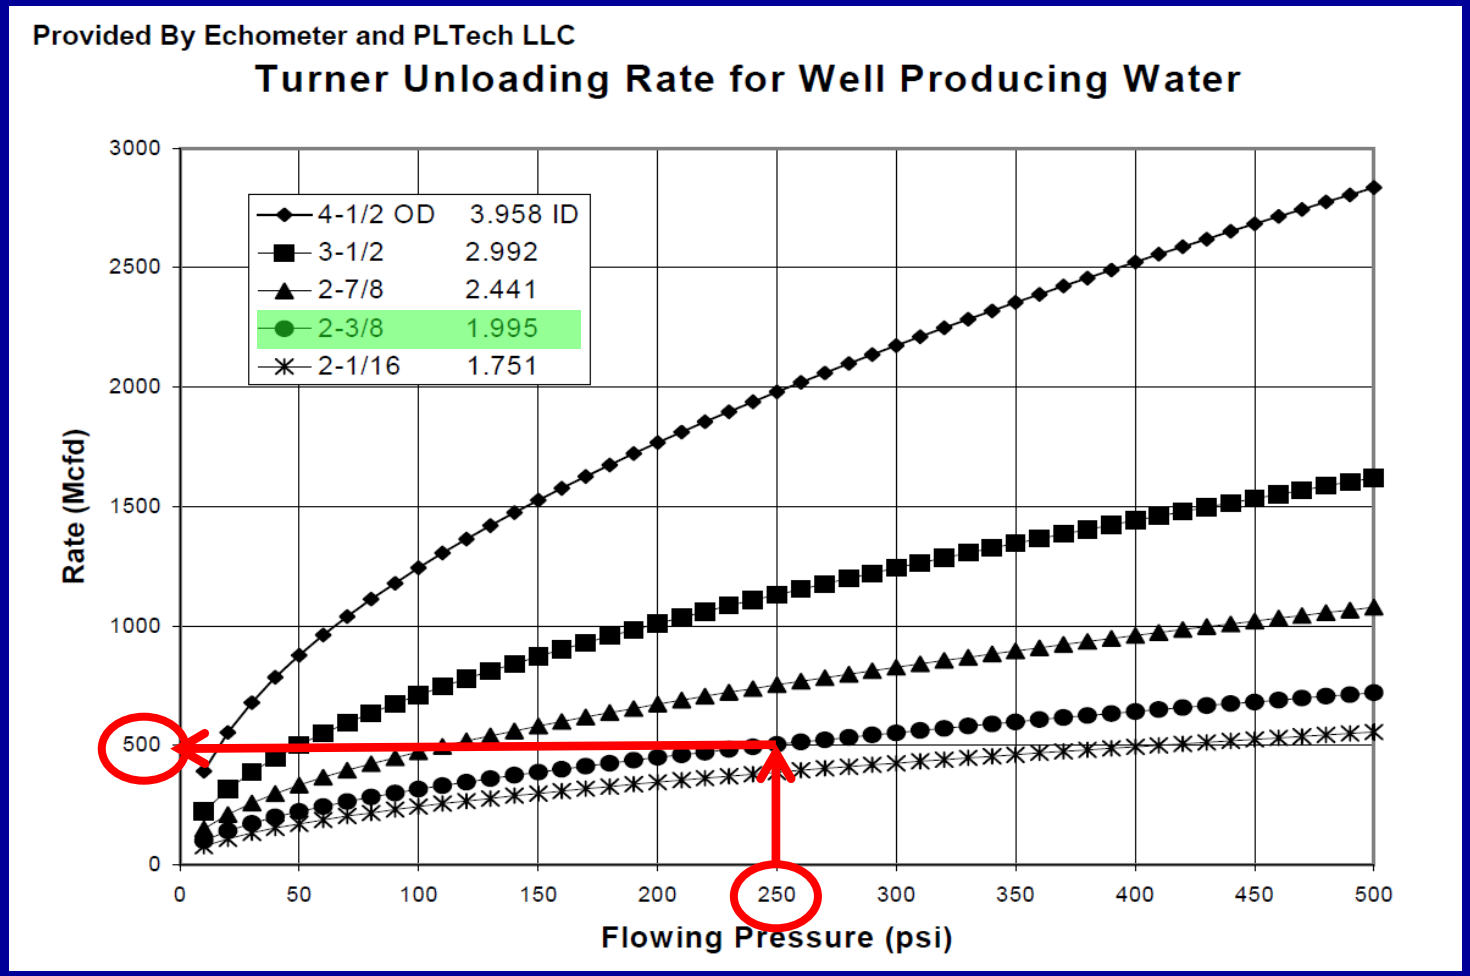

What's happening at bottom of well?

Coleman Critical Flow Rate is 20% less than Turner

SPE 120625 "Guidelines for the Proper Application of Critical Velocity Calculations" by Sutton, Cox, Lea, Rowlan

SPE 94081 "A Systematic Approach to Predicting Liquid Loading in Gas Wells" by Gua, Ghalambor, Xu.

Plunger Lift Well Requirements

Video courtesy of Marathon

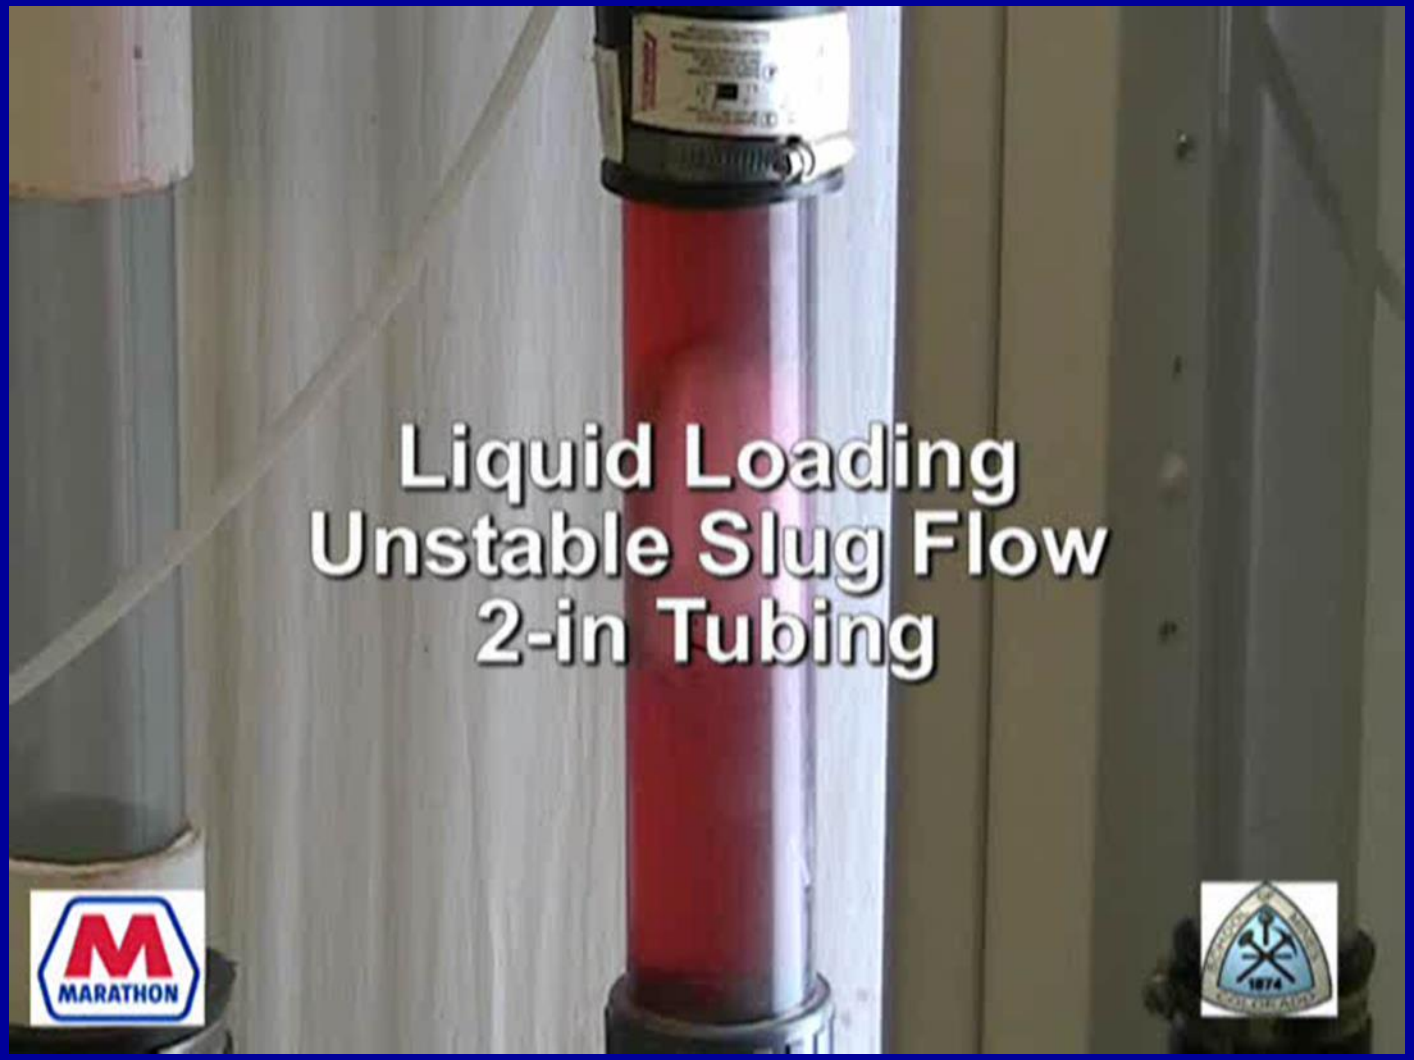

Plunger Lift Well Requirements

IS GAS VOLUME SUFFICIENT ?

NO PACKER
400 SCF / BBL / 1,000 FT OF LIFT

Example:
400 scf X 10 bbls X 7500 ft / 1000 ft
30,000 scf or 30 mcf

Compare actual gas volume to required gas volume – with clear tubing!

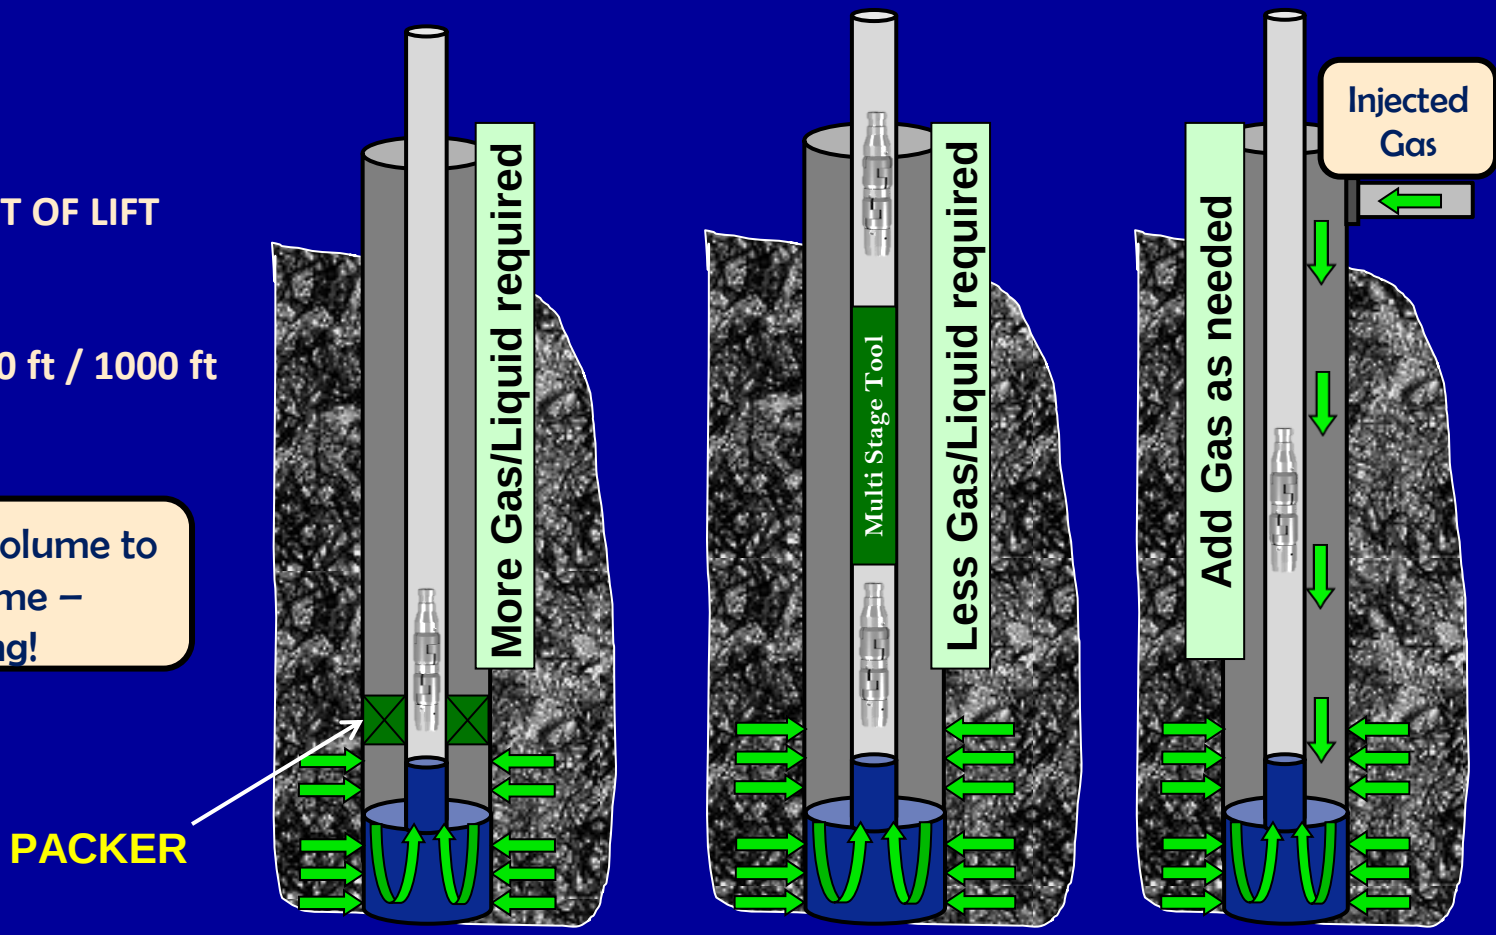

Plunger Lift Well Requirements

IS GAS PRESSURE SUFFICIENT ?

LIFT PRESSURE

Lift Pressure >/= 2X Liquid Load

LOAD FACTOR

Liquid Load / Lift Pressure <= 0.5

FOSS AND GAUL

$CP_{req'd} = CP_{min} \times \{(A_{ann} + A_{tbg}) / A_{ann}\}$

$CP_{min} = \{SLP + P_p + P_c FV\} \times \{1 + D/K\}$

CP = Casing Pressure; SLP = Sales Line Pressure

A_{ann} = Area Annulus; A_{tbg} = Area Tubing

P_p = Pressure req'd to lift just the plunger

P_c = Pressure req'd to lift 1 bbl of fluid and overcome friction

FV = Fluid Volume above the Plunger

K = Constant accounting for gas friction

D = Depth of the Plunger

Tubing	K	Pc
2 3/8	33,500	165
2 7/8	45,000	102
3	57,600	67

OTHER CONSIDERATIONS

- ✓ Packer ?
- ✓ No holes in tubing
- ✓ Same ID from BHS to Lubricator
- ✓ End of tubing location
- ✓ Control valve trim size
- ✓ Orifice plate trim size
- ✓ Flow meter properly sized
- ✓ Pipeline pressure surge restrictions
- ✓ Dump valves appropriate for surges
- ✓ Clean / dry gas supply available
- ✓ Knowledgeable operator(s) ! ! !

APPLICATIONS AND BENEFITS

Applications and Benefits

TYPICAL APPLICATIONS

GAS WELLS

- ✓ Removal of liquids
- ✓ Reduction of emissions
- ✓ Keeps tubing free of paraffin, salt & scale

OIL WELLS

- ✓ Produce from high GLR wells
- ✓ Conserve formation pressure
- ✓ Control paraffin and hydrates

LOW GAS TO LIQUID RATIO WELLS

- ✓ 2 Stage plunger lift
- ✓ Plunger assisted gas lift
- ✓ Gas assisted plunger lift

TYPICAL BENEFITS

STABILIZES AND IMPROVES PRODUCTION

- ✓ 20% improvement is common
- ✓ Keeps tubing clear of debris
- ✓ Can produce wells to depletion
- ✓ Produces with a low casing pressure

ECONOMICAL

- ✓ Low initial investment
- ✓ Low operating, repair and maintenance costs
- ✓ Reduces chemical cost, venting and swabbing
- ✓ Rig not required for installation
- ✓ Cost of system is unaffected by well depth

GOOD FOR THE ENVIRONMENT

- ✓ Reduces methane emissions and lost gas
- ✓ Operates on solar energy

Benefits with Telemetry

STABILIZE AND IMPROVE PRODUCTION

- ✓ Allows skilled operator to control many wells
- ✓ Optimize production using real time data and trends
- ✓ Rapid and enhanced troubleshooting accuracy

ECONOMICAL

- ✓ Identify & resolve problems before profits are lost
- ✓ Reduce windshield time
- ✓ Reduce equipment repair and maintenance
- ✓ Reduce unplanned well downtime

SAFETY

- ✓ Remote, real time knowledge of well site parameters
- ✓ Remote shut-in of wells when necessary
- ✓ Less drive time (fuel, insurance, maintenance)

Economics

COST ITEMS

- ✓ Check tubing
  - ✓ Drift, broach, pressure check
- ✓ Set bottom hole spring
- ✓ Re-configure well head tree
- ✓ Install lubricator
- ✓ Install control (motor) valve
- ✓ Install pressure transducers

$ 15,000 to $ 25,000

COST ITEMS

- ✓ Establish communication with flow meter and "office"
- ✓ Install plunger lift controller
- ✓ Route clean, dry gas to solenoid
- ✓ Install plunger
- ✓ Swab well if necessary
- ✓ Establish controller settings

Maintain wells natural decline curve. Don't wait till production is lost!

Flow Rate	10 % Change	15 % Change	20 % Change	25 % Change
100 Mcf/d	$ 1,200 / mo	$ 1,800 / mo	$ 2,400 / mo	$ 3,000 / mo
200 Mcf/d	$ 2,400 / mo	$ 3,600 / mo	$ 4,800 / mo	$ 6,000 / mo
300 Mcf/d	$ 3,600 / mo	$ 5,400 / mo	$ 7,200 / mo	$ 9,000 / mo
400 Mcf/d	$ 4,800 / mo	$ 7,200 / mo	$ 9,600 / mo	$ 12,000 / mo
500 Mcf/d	$ 6,000 / mo	$ 9,000 / mo	$ 12,000 / mo	$ 15,000 / mo

$ 4 / mcf

INSTALLATION AND OPERATION CONSIDERATIONS

Installation Considerations

Minimize Restrictions !

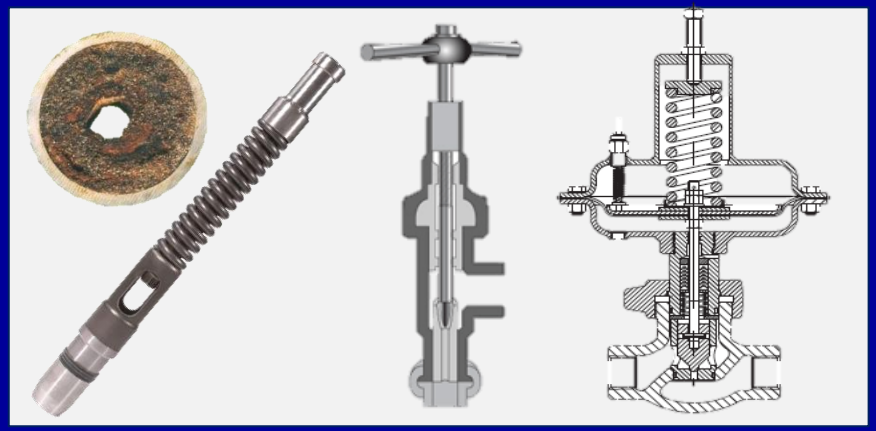

- ✓ Scale, Paraffin – Drift and broach tubing
- ✓ Bottom hole spring holddown – size, debris
- ✓ Motor valve trim – full port opening
- ✓ Orifice plate at flow meter
- ✓ Well head – Sleeve if needed
- ✓ Chokes

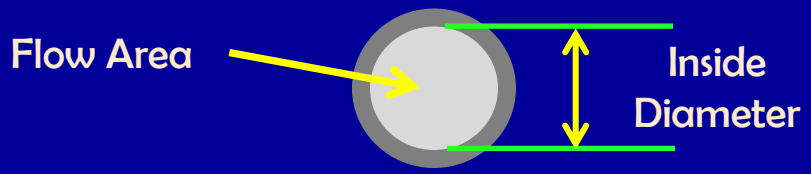

Diameter	Area	% Difference
7/8 inch	0.601 inch^2	0 %
1 inch	0.785 inch^2	30.6 %
1 ¼ inch	1.227 inch^2	104.2 %
1 ½ inch	1.767 inch^2	194.0 %

Installation Considerations

End of Tubing Location - Vertical Well

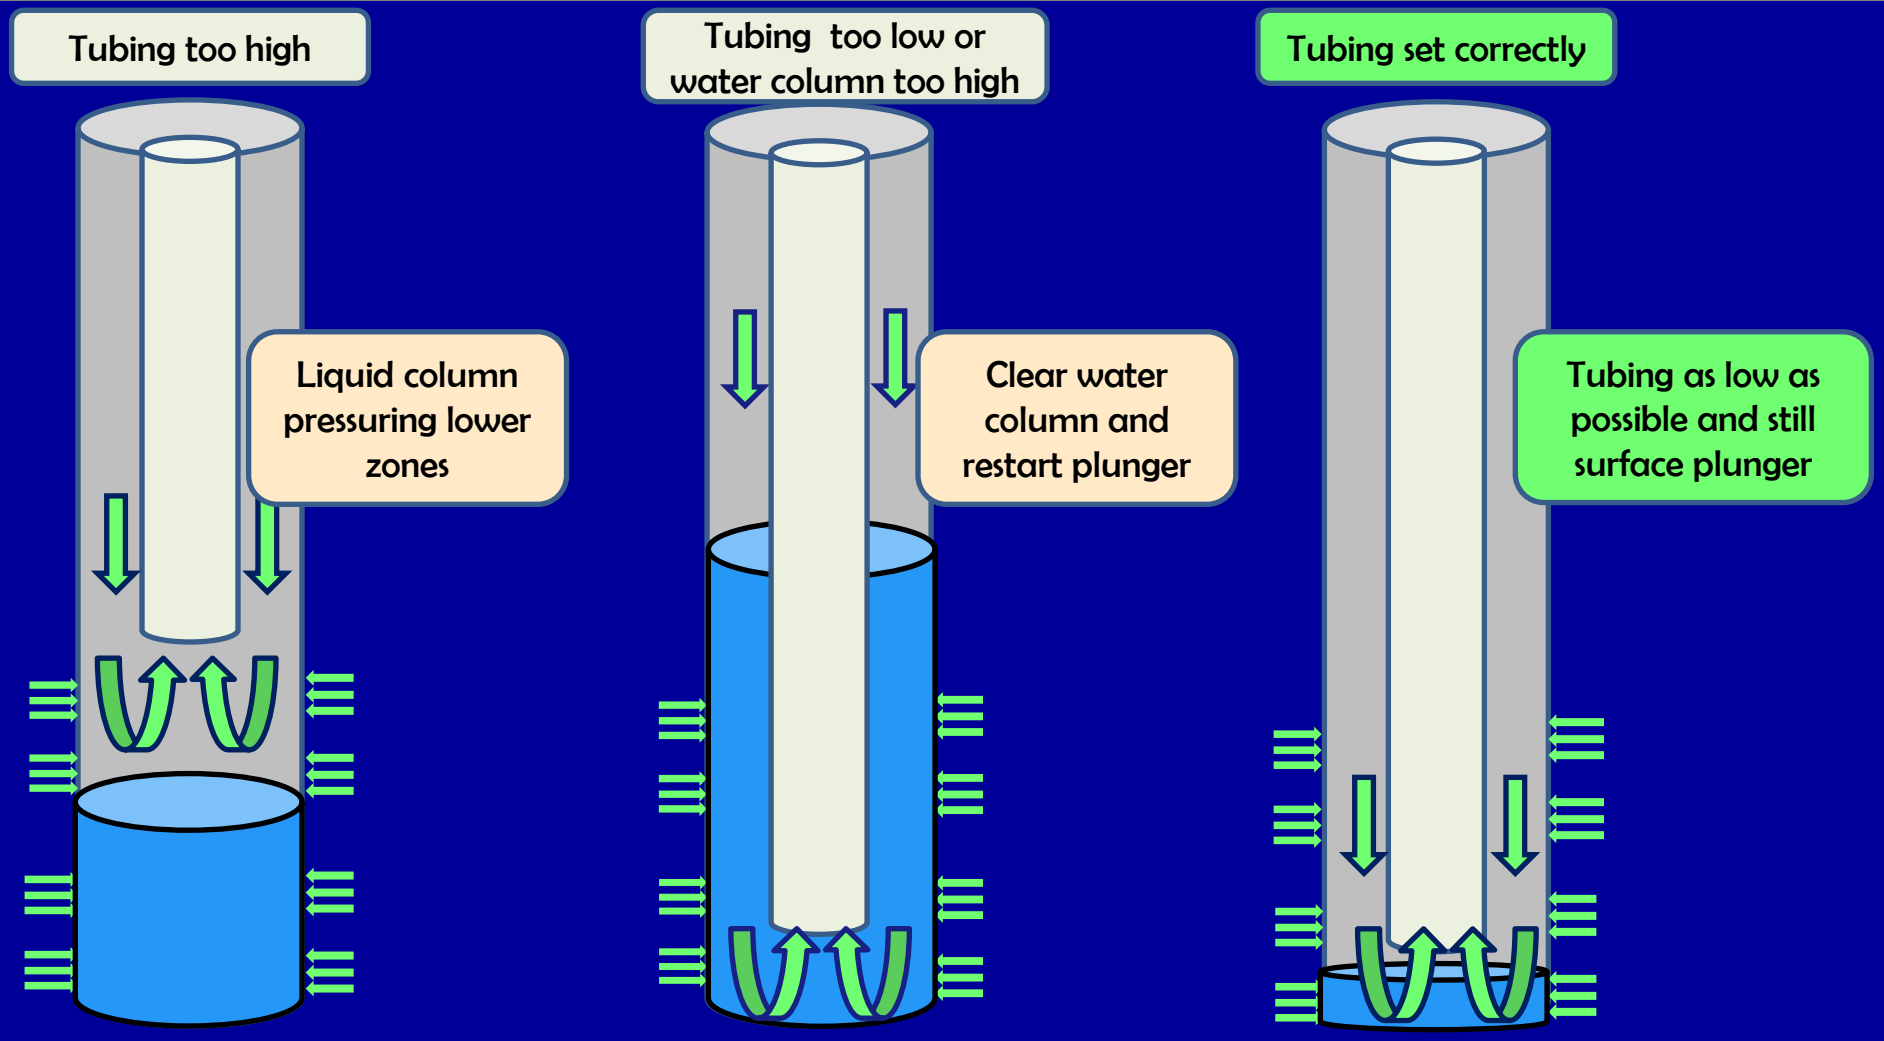

Installation Considerations

Bottom Hole Spring Location – Horizontal Well

MD	TVD	EW	NS	DIP	AZM
0	0	0	0	0	0
96	96	-0.33	-0.07	0.4	257.4
158	158	-0.88	-0.47	0.9	224.6
188	187.99	-1.1	-0.86	0.9	192.9
219	218.98	-1.08	-1.5	1.5	169.5
↓	↓	↓	↓	↓	↓
7382	7213.09	809.2	-451.33	43.6	13.8
7413	7235.11	814.22	-430.1	45.9	12.8
7445	7256.99	819.27	-407.3	47.8	12.2
7476	7277.16	824.2	-384.29	51	12
7508	7296.46	829.35	-359.3	54.8	11.3
7539	7313.41	834.27	-333.82	58.9	10.6

Bottom Hole Spring Location - Deviation

45 to 50 degree typical

SPE 147225 – Analysis of Plunger Lift Applications in the Marcellus Shale

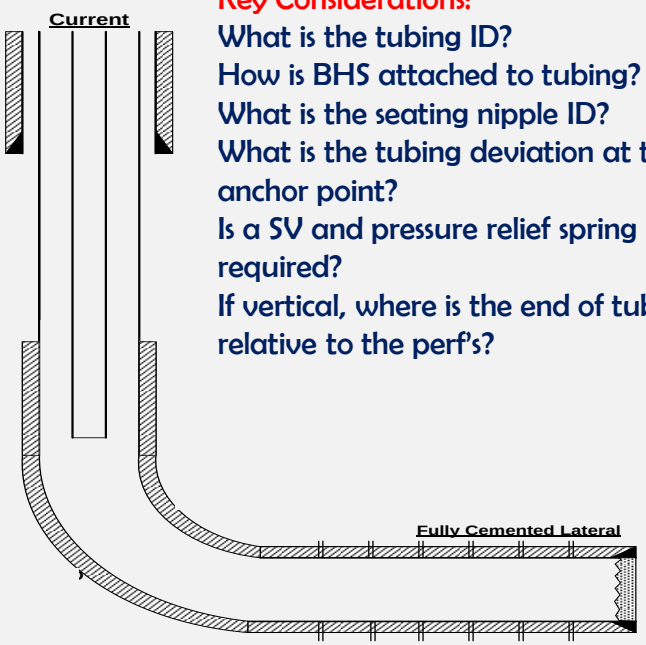

Key Considerations:

What is the tubing ID?

How is BHS attached to tubing?

What is the seating nipple ID?

What is the tubing deviation at the anchor point?

Is a SV and pressure relief spring required?

If vertical, where is the end of tubing relative to the perf's?

Tubing Details : (02/15/2008)

229 jts 2 3/8" 4.7 lb/ft, J-55, FBN tbg

F Nipple @ 7432.9

1 jt 2 3/8" 4.7 lb/ft, J-55, FBN tbg

Notched Collar w/ ceramic disk

EOT @ 7465 ft.

Operation Considerations

Algorithm Selection

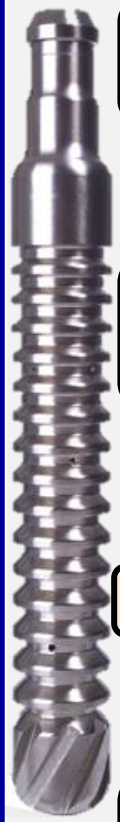

Plunger Fall

Time for plunger to start falling or reach bottom of well

Pressure Build

Open at minimum pressure required to surface plunger at desired velocity

Plunger Rise

Time for plunger to surface

End Production

Maximize production. Allow the desired liquid volume to enter tubing on every cycle

Allowed Fall Time

- Time = set point
- Tubing pressure = set point
- Casing pressure = set point
- Tubing / Casing = set point
- Tubing – Line = set point
- Casing – Line = set point
- Casing - Line = Foss and Gaul
  = % of Foss and Gaul
- Load Factor = Set point

Load Factor = Liquid Load / Lift Pressure

Layered Conditions

Allowed Rise Time

- Time = set point
- Tubing pressure = set point
- Casing pressure = set point
- Casing pressure = Increase psi
- Flow rate = set point
  = Critical flow
  = % of critical

Auto Adjusting Algorithms

Operation Considerations

Preventative Maintenance

Method

- Who? What? When? How to track?

Typical "checks"

- Plunger
  - When to replace? How do you know?
- Lubricator
  - Spring, catcher, connection to WH
- Bottom hole spring
  - Debris, spring, seal
- Motor valve
  - Trim, gas supply if utilized
- Battery / Solar panel
- Valves - grease
- Arrival sensor & cable – no misses!
- Tubing – no obstructions, no holes
- Flow meter calibration

Other

Organizational structure

- In house optimizers?
- Field operator responsibilities?

Training

- Who? How often? Track learning!
- Basic plunger lift principles
- Plunger lift equipment
- Optimization of wells
- Troubleshooting
- Controller settings
- Problem solving process

Initial well lineout

- Who?

Remote monitor and optimize

- In house? 3rd Party?

SAFETY

Safety

Arrive safely !

- In 2011, more than 2 out of every 5 fatal workplace incidents were transportation accidents

- Four primary causes of O&G related transportation accidents
  - Ignoring the speed limit
  - Using a cell phone while driving

    About 80% of people involved in traffic accidents are distracted
  - Not wearing a seat belt

    63 % of people killed in traffic accidents were not wearing seat belts
  - Lack of rest

    Tired drivers involved in 4,000 road crashes in Texas in 2010

Appropriate Training!	Job Safety Analysis!	H_2S	PPE ?	Trapped Pressure?	Plunger Velocity

Safety

Serious Injuries

- Pressure traps (hydrates, sand, scale)
- Lubricator cap off, pressure trap under plunger
- Open master valve, hammer unions not secure
- Installing well head with underrated equipment
- High plunger velocity – especially when venting to tanks
- Compressed lubricator springs
- Removing cap, cracking open control valve
- Pressure gauges are not always right

Linkedin Group

"Plunger Lifted Gas Wells"

ADDENDUM

Tubing Fluid Height and Volume

Fluid Volume in Tubing (Barrels)

- FV = 0.002242 X (CP-TP) X (ID^2)/SG
- CP=Casing Pressure; TP=Tubing Pressure
- ID=Tubing Inner Diameter (inches)
- SG = Specific Gravity (1.0 for water)

Fluid Height in Tubing (Feet)

- FH = (CP-TP) / (0.433 psi/ft X SG)
- 0.433 psi/ft = Pressure gradient of water
- SG = Specific Gravity (1.0 for water)
- Typically, fluid column is 20 % liquid, 80 % gaseous liquid (foam). Divide results by 20% to obtain height of the gaseous liquid column

Tubing Fluid Height and Volume

2 3/8" tubing (1.995" ID)

CP-TP (psi)	Liquid Volume (bbls ; SG = 1)	Liquid Height (solid column)	Liquid Height (80% gaseous)
10	0.089	23 ft	115 ft
20	0.178	46 ft	231 ft
30	0.268	69 ft	346 ft
40	0.357	92 ft	462 ft
50	0.446	115 ft	577 ft
60	0.535	138 ft	692 ft
70	0.625	161 ft	808 ft
80	0.714	185 ft	923 ft
90	0.803	208 ft	1039 ft
100	0.892	231 ft	1154 ft
125	1.115	288 ft	1443 ft
150	1.338	346 ft	1732 ft
175	1.562	404 ft	2020 ft
200	3.569	923 ft	4618 ft

2 7/8" tubing (2.441" ID)

CP-TP (psi)	Liquid Volume (bbls ; SG = 1)	Liquid Height (solid column)	Liquid Height (80% gaseous)
10	0.133	23 ft	115 ft
20	0.267	46 ft	231 ft
30	0.400	69 ft	346 ft
40	0.534	92 ft	462 ft
50	0.668	115 ft	577 ft
60	0.801	138 ft	693 ft
70	0.925	162 ft	808 ft
80	1.068	185 ft	924 ft
90	1.202	208 ft	1039 ft
100	1.336	231 ft	1154 ft
125	1.670	289 ft	1443 ft
150	2.003	346 ft	1732 ft
175	2.338	404 ft	2020 ft
200	5.343	923 ft	4616 ft

Sufficient Volume and Pressure

Sufficient Gas Volume

- No Packer
  - 400 scf / bbl / 1000 ft of lift
- Packer
  - 2,000 scf / bbl / 1000 ft of lift

Sufficient Gas Pressure

- Casing Pressure at least 1.5 X line pressure
- Lift Pressure at least 2 X greater than fluid load
- See Foss and Gaul requirements

Casing Pressure Required

Foss and Gaul (CP Required to Lift Plunger)

- $CP_{req'd} = CP_{min} \times \{(A_{ann} + A_{tbg}) / A_{ann}\}$
- $CP_{min} = \{SLP + P_p + P_c FV\} \times \{1 + D/K\}$

Tubing	K	Pc
2 3/8	33,500	165
2 7/8	45,000	102
3	57,600	67

- CP = Casing Pressure; SLP = Sales Line Pressure
- A_{ann} = Area Annulus; A_{tbg} = Area Tubing
- P_p = Pressure required to lift just the plunger
- P_c = Pressure Required to lift 1 bbl of fluid and overcome friction
- FV = Fluid Volume above the Plunger
- K = Constant accounting for gas friction below the plunger
- D = Depth of the Plunger

Critical Flow Rate

Critical Flow Rate (Coleman, P_f Less Than 1,000 psi)

- $CV_{water} = 4.434 \times [\{(67 - 0.0031P_f)^{1/4}\} / \{(0.0031P_f)^{1/2}\}]$
- $CV_{condensate} = 3.369 \times [\{(45 - 0.0031P_f)^{1/4}\} / \{(0.0031P_f)^{1/2}\}]$
- $FR = CV \times [pi \times (ID/2)^2] \times (1\ ft/144\ in^2) \times 86{,}400\ sec/day$
- CV = Critical Velocity (ft/sec)
- FR = Flow Rate (scf/d)
- P_f = Flowing Pressure
- ID = Tubing Inner Diameter

Turner (P_f Greater Than 1,000 psi)

- Turner = Coleman + 20%

Standard Cubic Foot

$$SCF = ACF \times P_f/P_s \times T_s/T_f$$

- SCF = Standard Cubic Foot of gas
  - Volume of gas contained in $1ft^3$ at $60^\circ F$ and 14.7 psi
- ACF = Actual or Measured Cubic Foot
- P_f = Flowing pressure (psi); P_s = 14.7 psi
- T_f = Flowing temperature ($^\circ R$)
- T_s = Standard temperature ($516.67^\circ R$)
- $^\circ R = {}^\circ F + 459.67$

Copyright

Rights to this presentation are owned by the company(ies) and/or author(s) listed on the title page. By submitting this presentation to the Gas Well Deliquification Workshop, they grant to the Workshop, the Artificial Lift Research and Development Council (ALRDC), and the Southwestern Petroleum Short Course (SWPSC), rights to:

- Display the presentation at the Workshop.
- Place it on the www.alrdc.com web site, with access to the site to be as directed by the Workshop Steering Committee.
- Place it on a CD for distribution and/or sale as directed by the Workshop Steering Committee.

Other use of this presentation is prohibited without the expressed written permission of the author(s). The owner company(ies) and/or author(s) may publish this material in other journals or magazines if they refer to the Gas Well Deliquification Workshop where it was first presented.

Disclaimer

The following disclaimer shall be included as the last page of a Technical Presentation or Continuing Education Course. A similar disclaimer is included on the front page of the Gas Well Deliquification Web Site.

The Artificial Lift Research and Development Council and its officers and trustees, and the Gas Well Deliquification Workshop Steering Committee members, and their supporting organizations and companies (here-in-after referred to as the Sponsoring Organizations), and the author(s) of this Technical Presentation or Continuing Education Training Course and their company(ies), provide this presentation and/or training material at the Gas Well Deliquification Workshop "as is" without any warranty of any kind, express or implied, as to the accuracy of the information or the products or services referred to by any presenter (in so far as such warranties may be excluded under any relevant law) and these members and their companies will not be liable for unlawful actions and any losses or damage that may result from use of any presentation as a consequence of any inaccuracies in, or any omission from, the information which therein may be contained.

The views, opinions, and conclusions expressed in these presentations and/or training materials are those of the author and not necessarily those of the Sponsoring Organizations. The author is solely responsible for the content of the materials.

The Sponsoring Organizations cannot and do not warrant the accuracy of these documents beyond the source documents, although we do make every attempt to work from authoritative sources. The Sponsoring Organizations provide these presentations and/or training materials as a service. The Sponsoring Organizations make no representations or warranties, express or implied, with respect to the presentations and/or training materials, or any part thereof, including any warrantees of title, non-infringement of copyright or patent rights of others, merchantability, or fitness or suitability for any purpose.